

# AI-P1A

## 1 AMPERE OUTPUT ROGOWSKI COIL SIGNAL CONDITIONER



The Rogowski coil integrator AI-P1A complements LEM's flexible clip-around coil ART and ARU families to provide a 1 A output instantaneous signal to replace conventional current transformer with dynamic extended range. AI-P1A is DIN rail mounted.

### Features

- Accuracy Class 0.5 (IEC 61869-2) <sup>(1)</sup>
- Linearity error  $\leq 0.10\%$
- Protection degree IP2X
- 35 mm DIN rail mounted
- Push-in terminals
- 1 A instantaneous output signals
- 6 selectable sensitivities depending on Rogowski coil:  
22.5, 70, 80, 85, 100, 120 mV/kA at 50 Hz
- 12 selectable ranges: 100, 200, 300, 400, 500, 600,  
800, 1000, 1500, 2000, 4000, 5000 A
- Ambient operating temperature  $-25 \dots +70\text{ }^{\circ}\text{C}$ .

### Advantages

- Compact design for DIN rail assembly
- High accuracy Class 0.5 (IEC 61869-2)
- Setup by user via Select / Edit buttons
- Clear status indication via bi-color led
- Over-temperature protection function.

### Applications

- MV/LV substations: transformer condition monitoring
- Power measurement: current measurement for active power calculation
- Building sub-metering: energy efficiency monitoring, consumption analysis and cost allocation
- Power quality monitoring: electrical loads and distribution system equipment
- Fault Detection, Isolation and Repair (FDIR)
- Remote Terminal Units (RTU).

### Standards

- Safety: IEC 61010-1: 2017
- EMC: IEC 61326-1: 2012
- UL 61010-1: Rev. 2016
- CAN/CSA C22.2 61010-1-12: Rev. 2016.

### Options

- Cross Power Plug-in: side contacts to stack up to 3 Integrator modules and use only one power supply

### Application Domains

- Industrial
- Smart grid.

**Note:** <sup>1)</sup> AI-P1A integrators fulfill accuracy class limits defined by IEC 61869-2 even if this standard does not apply to Rogowski integrators.  
See detailed curve of accuracy given in this document.  
N° 97.T7.99.000.0

### Material and Insulation coordination

Parameter	Symbol	Unit	Value	Comment
RMS voltage for AC insulation test, 50 Hz, 5 seconds	$U_d$	kV	1.5	Between power supply 24 V and Rogowski connection + output
Flammability according to UL94	-	-	V0	-
Material	-	-	Polyamide	Halogen free

### Environmental characteristics

Parameter	Symbol	Unit	Value	Comment
Ambient operating temperature <sup>(1)</sup>	$T_A$	°C	-25 ...+70	
Ambient storage temperature	$T_{A\,st}$	°C	-40 ...+85	
Relative humidity (non-condensing)	$RH$	%	95	
Altitude above sea level	-	m	2000	
Mass	$m$	g	100	

### Mechanical characteristics

Parameter	Symbol	Unit	Value	Comment
General dimensional tolerance	-	mm	±1	
Dimensions	-	mm <sup>3</sup>	100 × 78 × 23.1	
Mounting on DIN rail (IEC 60715)	-	-	TH35-7.5 TH35-15	

### Power Supply

Parameter	Symbol	Unit	Value	Comment
24 V DC Supply voltage	$U_{C\,DC}$	V	+16.8 ...+31.2	
Current consumption <sup>(2)</sup>	$I_C$	mA	max. 350	@ 24 V with 1 A output
Auxiliary supply through micro-USB		V	5	For product configuration only

**Notes:** <sup>1)</sup> The over-temperature protection may limit the output current in certain conditions of use.  
Please refer to the derating curve on page 5.

<sup>2)</sup> Please refer to consumption curve on page 5.

### Input Signal

Parameter	Symbol	Unit	Data	Comment
Rogowski coil sensitivity selection			With push buttons	See product configuration description
Selection indicator			bi-color LED	Green: Current range Red: Sensitivity & Output
Rogowski coil sensitivities		mV/kA	22.5, 70, 80, 85, 100, 120	At 50 Hz
Typical input impedance		kΩ	10	
Rated frequency	$f_r$	Hz	50 ... 60	Automatic recognition of grid frequency
Current measurement range selection			With push buttons	
Current measurement range		A	100, 200, 300, 400, 500, 600, 800, 1000, 1500, 2000, 4000, 5000	
Overcurrent measurement range		%	120	Overcurrent based on maximum value of the selected range
Short time withstand current on primary for 3 s <sup>(1)</sup>		kA	130	Worst case scenario with a Rogowski coil sensitivity of 120 mV/kA

### Output Signal

Parameter	Symbol	Unit	Min	Typ	Max	Comment
0 ...1 A instantaneous current output mode	$I_{out}$	A	0	1	1.2	1 A @ 100% I range <sup>(2)</sup>
Load resistance	$R_L$	Ω	0	-	1.5	
Temperature coefficient of $s$ (all output mode)	TCS	ppm/K	-	-	150	From -25 °C ... +70 °C
Frequency bandwidth (@ -3 dB)	BW	Hz	9 1450	10 1500	11 1550	Low cut-off frequency High cut-off frequency
Phase displacement @ 50 Hz or 60 Hz	$\Delta\phi$	°	-	-	0.2	
Accuracy class	-		-	0.5 <sup>(3)</sup>	-	
Linearity error	$\varepsilon_L$	%			0.1	

**Notes:** <sup>1)</sup> Maximum AI-P1A input voltage of 16 V for 3 s equivalent of measurement of short time current of 130 kA for 3 s with a Rogowski coil of 120 mV/kA sensitivity. For higher short time current rated network please consult our technical team.

<sup>2)</sup> Output signal is 1.2 A for 120% of I range, nevertheless the product is not intended to be used on continuous mode at this output level. Thermal protection may operate in case of thermal overload.

<sup>3)</sup> AI-P1A integrators fulfill accuracy class limits defined by IEC 61869-2 even if this standard does not apply to Rogowski integrators.

See detailed curve of accuracy given in this document.

### Definition of typical, minimum and maximum values

Minimum and maximum values for specified limiting and safety conditions have to be understood as such as well as values shown in “typical” graphs.

On the other hand, measured values are part of a statistical distribution that can be specified by an interval with upper and lower limits and a probability for measured values to lie within this interval.

Unless otherwise stated (e.g. “100 % tested”), the LEM definition for such intervals designated with “min” and “max” is that the probability for values of samples to lie in this interval is 99,73 %.

For a normal (Gaussian) distribution, this corresponds to an interval between  $-3$  sigma and  $+3$  sigma.

If “typical” values are not obviously mean or average values, those values are defined to delimit intervals with a probability of 68,27 %, corresponding to an interval between  $-\sigma$  and  $+\sigma$  for a normal distribution.

Typical, minimum and maximum values are determined during the initial characterization of the product.

### Compatibility between current range selected and Coil sensibility selected

Current range and coil sensitivity should be chosen according to the table below.


		Coil sensibility selected					
		22.5	70	80	85	100	120
Current Range Selected	100	✓	✓	✓	✓	✓	✓
	200	✓	✓	✓	✓	✓	✓
	300	✓	✓	✓	✓	✓	✓
	400	✓	✓	✓	✓	✓	✓
	500	✓	✓	✓	✓	✓	✓
	600	✓	✓	✓	✓	✓	✓
	800	✓	✓	✓	✓	✓	✓
	1000	✓	✓	✓	✓	✓	✓
	1500	✓	✓	✓	✓	✓	✓
	2000	✓	✓	✓	✓	✓	
	4000	✓					
	5000	✓					

### Front panel LED indicator

Green (x12)	Current range
Red (lower x6)	Input sensitivity
Range position blinking Red + Green	Input overload
Running light	Over temperature protection activated (output disabled)


## AI-P1A output current vs load resistance

Ambient temperature 25 °C ... 70 °C <sup>1)</sup>

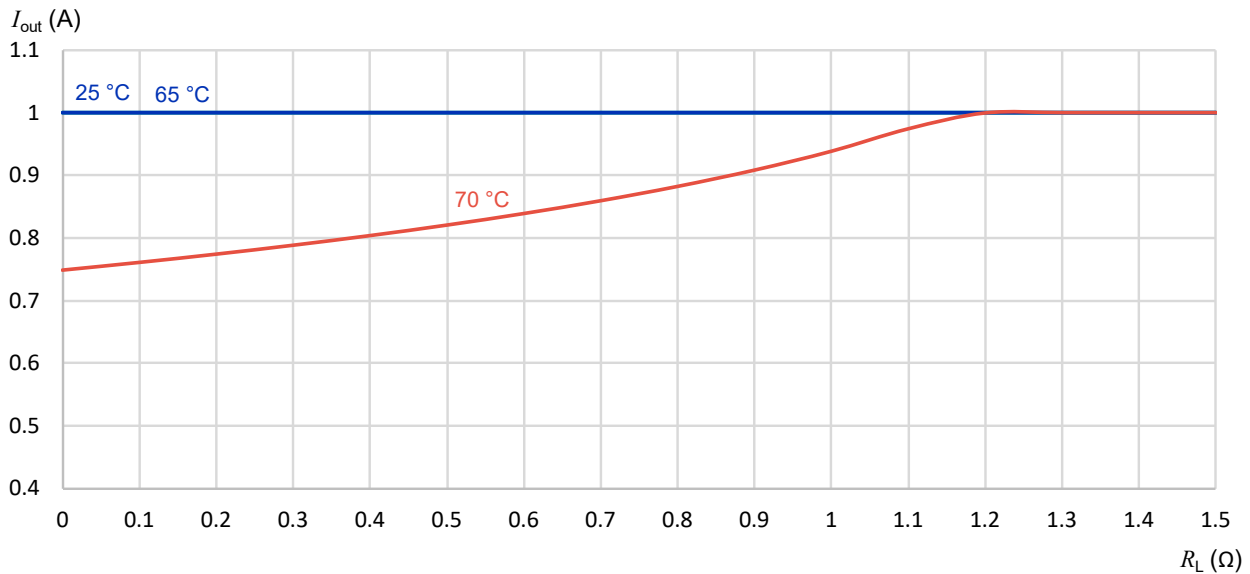

Note: <sup>1)</sup> Typical values measured in laboratory conditions (climatic chamber, stirred air)

## AI-P1A current consumption vs temperature

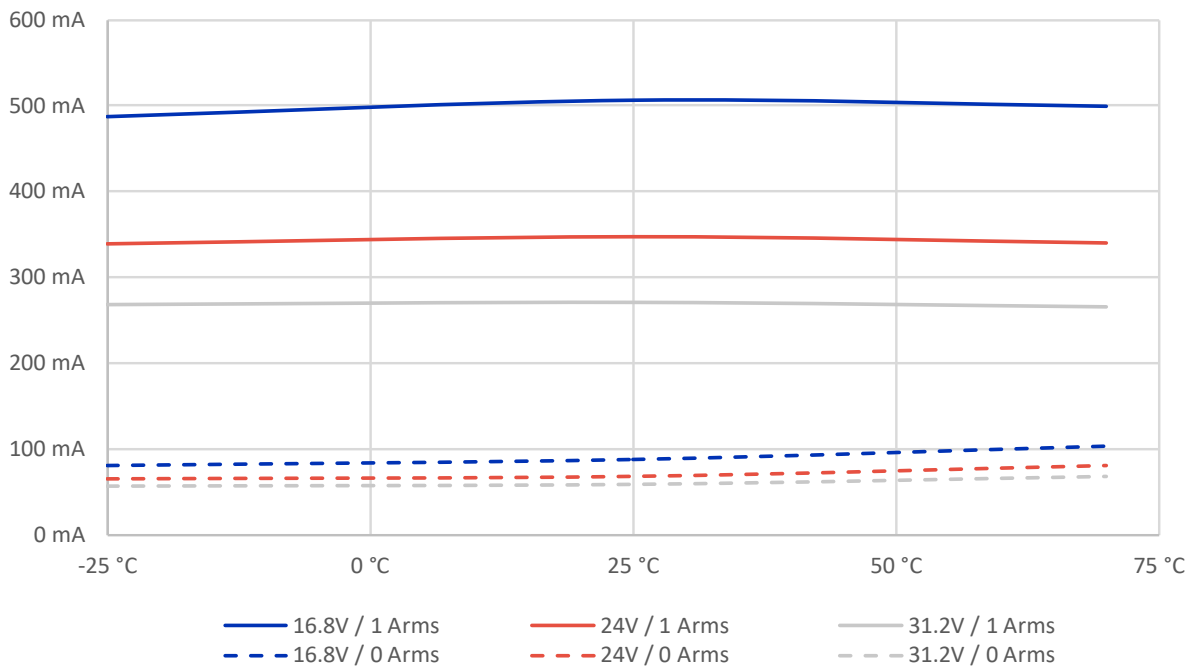


Supply voltage 16.8 V ... 31.2 V


Output current 0 ARMS and 1 ARMS

## Typical performance characteristics, Range 100 A

Output 0 ... 1 A, Sensitivity 22.5 mV/kA

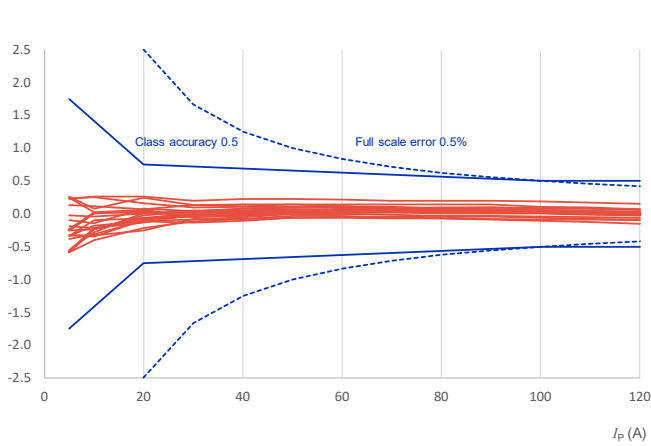


Measurement error (%) @ 25 °C

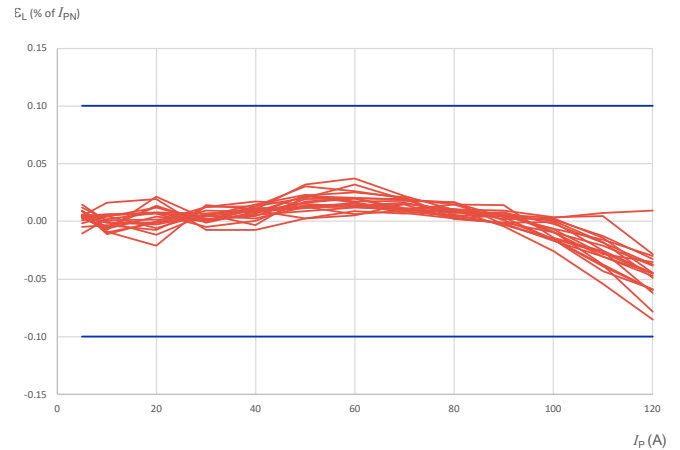


Linearity error (% of  $I_{PN}$ ) @ 25 °C

## Typical performance characteristics, Range 1000 A

Output 0 ... 1 A, Sensitivity 22.5 mV/kA

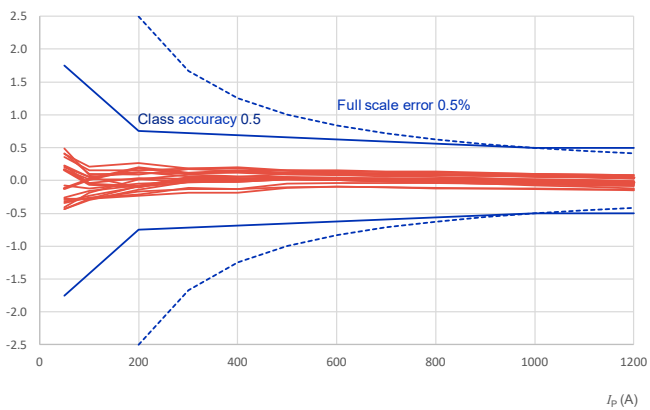

Measurement error (%) @ 25 °C

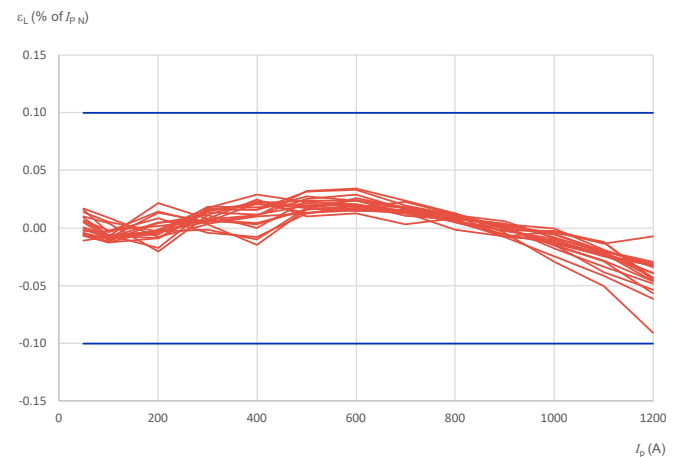


Linearity error (% of  $I_{PN}$ ) @ 25 °C

## Example of application


Product configuration:

- Range (green LED): 5000 A
- Output signal: 0 ... 1.2 A
- Sensitivity (red LED): 22.5 mV/kA


The graph hereafter gives conversion between the primary current, the voltage output of Rogowski coil and the output voltage of the AI-P1A.

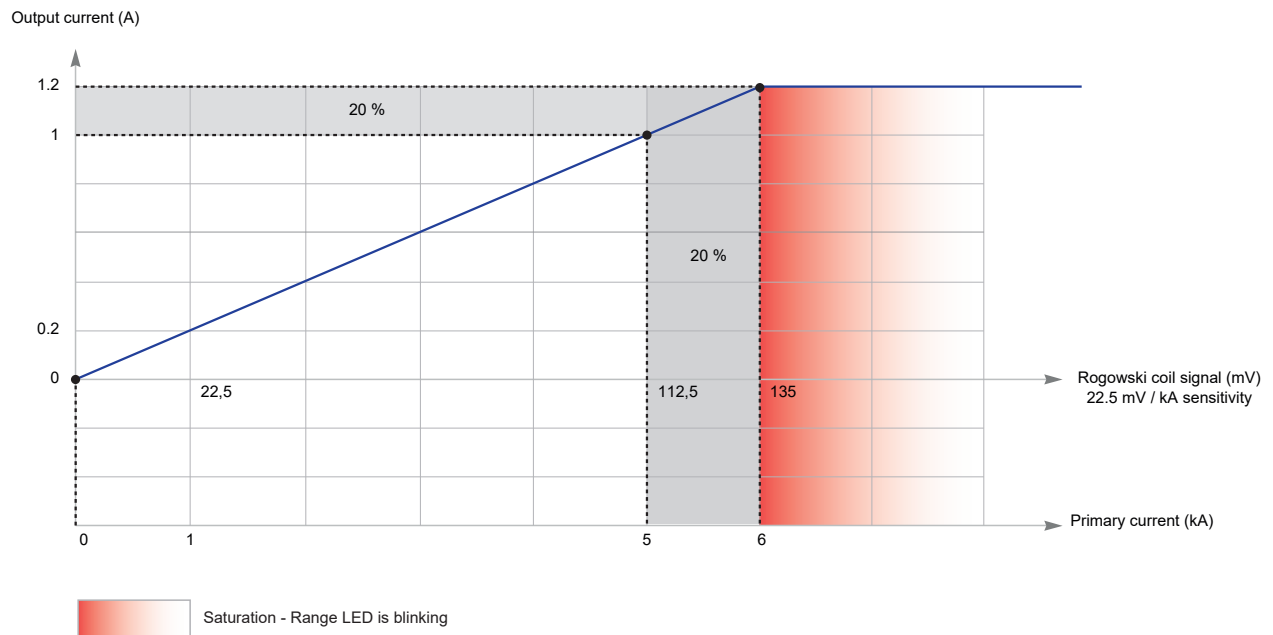

### Example of typical transient response output 0 ... 1 A

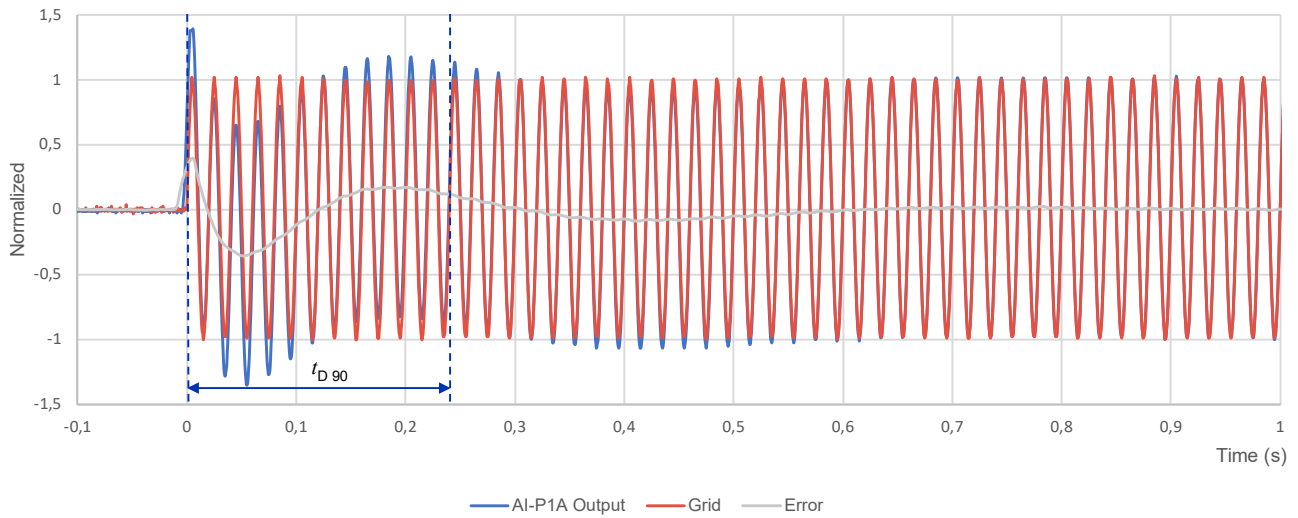


**Current rise**  $t_{D\ 90} < 240\text{ ms}$

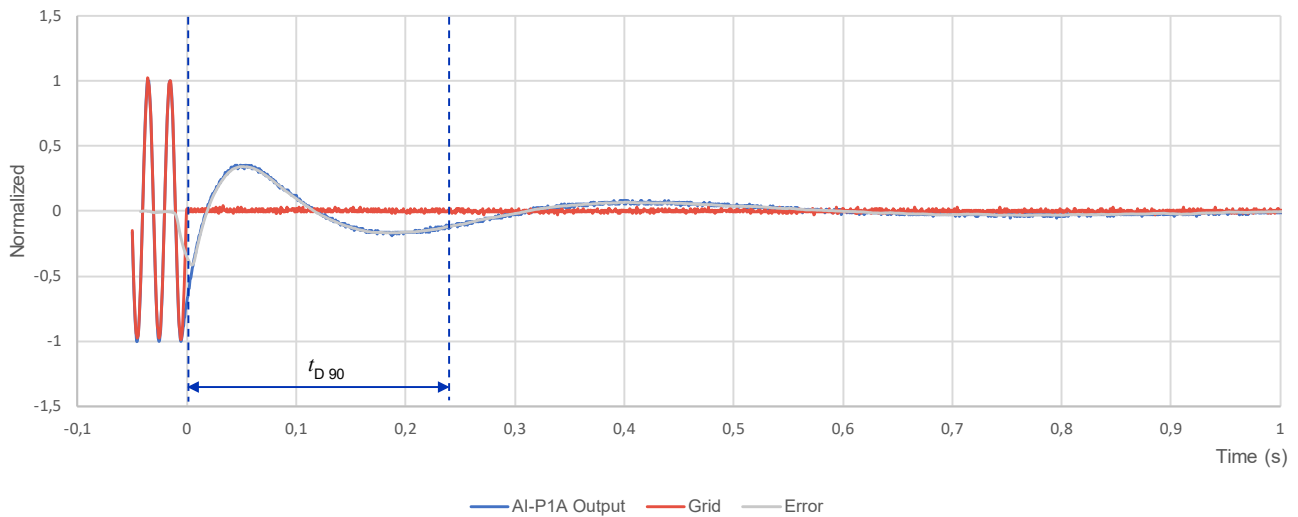

**Current fall**  $t_{D\ 90} < 240\text{ ms}$



## Connections and Interfaces

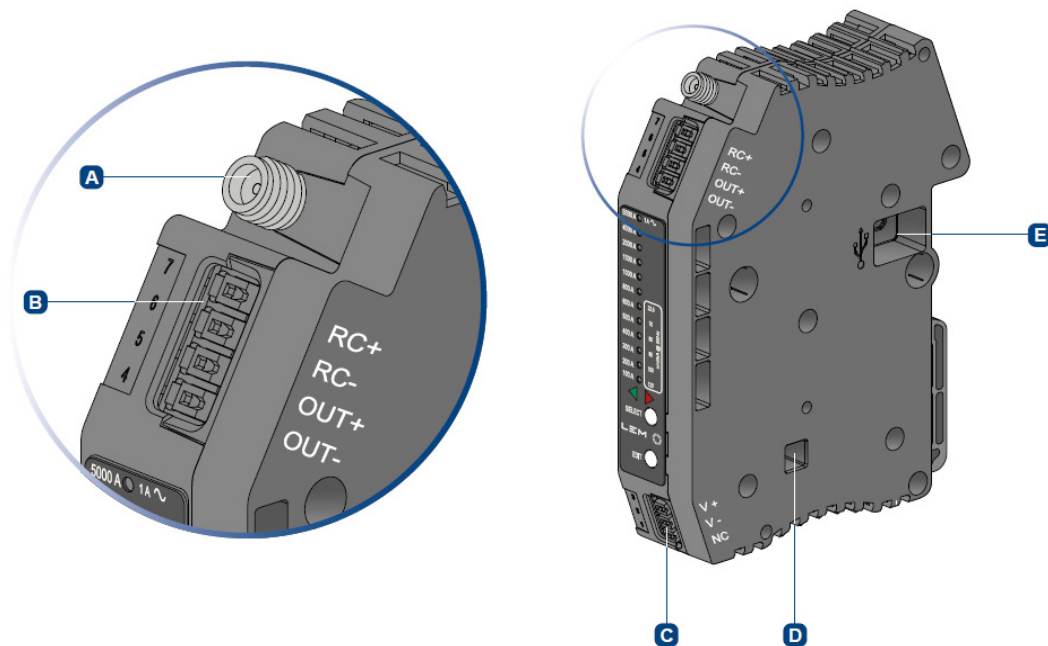

- A SMA Input for Rogowski coil (optional)**  
Section: 0.13 ... 1.5 mm<sup>2</sup>
- B Terminal input coil and output signal**  
Section: 0.13 ... 1.5 mm<sup>2</sup>
- C Power supply terminals (DC, 24 V)**  
Section: 0.13 ... 1.5 mm<sup>2</sup> (24 ... 16 AWG)  
Third pin not connected

- D Cross Power plug-in**  
Side contacts to stack up to 3 Integrator modules and use only 1 power supply.
- E Micro USB**  
Energise AI-1A for configuration without connecting 24 V DC supply.

Parameter	Unit	Min	Typ	Max	Comment
Type			Push-in		
Clamping range	mm <sup>2</sup>	0.13	-	1.5	
Cross section	AWG	24	-	16	
Stripping length	mm	9.5	10	10.5	

## AI-P1A series: name and codification


# AI-P1A

**Family:**  
AC Integrator


**Case type / Output signal 1 A:**  
P: DIN RAIL mounting / 1 Ampere output

Description	Item Number	Comment
AI-P1A	90.T7.99.000.0	Integrator 1A standard for automation applications
AI ACCESSORY KIT M2 CROSS POWER PLUG-IN <sup>(1)</sup>	90.T8.98.001.0	Cross Power plug-in accessory: Kit to connect 2 integrators power supplies


## Dimensions (in mm)

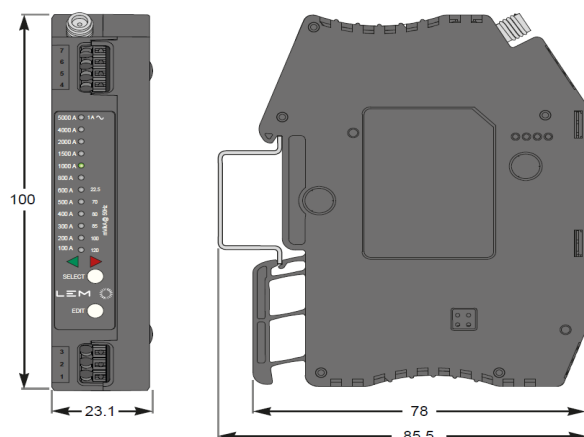


## Installation, removal, wiring

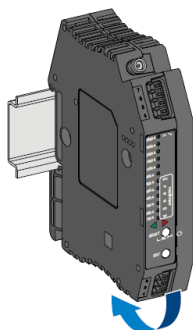

To install, rotate terminal to mount on the rail DIN

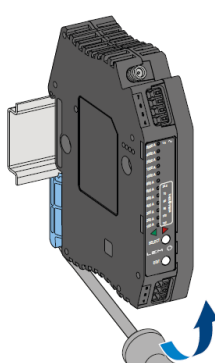

To remove the device, use a 4 mm flat screwdriver

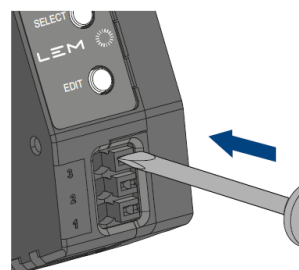

To remove wiring easily, use any tools or a 2.5 mm flat screwdriver

Note: <sup>1)</sup> the stacking of 3 AI-P1A with this kit may reduce the maximum temperature before triggering the over-temperature protection.  
A special care must be taken in the installation and venting conditions

N° 97.T7.99.000.0

## Safety and warning notes

**In order to guarantee safe operation of the signal conditioner and to be able to make proper use of all features and functions, please read these instructions thoroughly!**

**Safe operation can only be guaranteed if the signal conditioner is used for the purpose it has been designed for and within the limits of the technical specifications.**

### Caution

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring signal conditioner may only be installed and put into operation by qualified personnel that have received an appropriate training. The corresponding national regulations shall be observed during installation and operation of the signal conditioner and any electrical conductor. The signal conditioner shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturers' operating instructions.

The product must be powered by a limited power source. The product shall be operated with Rogowski Coil compliant with IEC 61010-2-032. Consistency of measurements during maintenance operations shall be checked. Consistency of measurement during commissioning and maintenance shall be checked with suitable means (clamp-on ammeter). Product shall not saturate .

### Caution, possibility of electric shock

When operating the signal conditioner, certain parts next to the signal conditioner may carry hazardous live voltage. The user shall ensure to take all measures necessary to be protected against electrical shock. Certain parts may contain conducting parts that shall not be accessible after installation. A protective enclosure or additional insulation barrier may be necessary. Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this signal conditioner can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care. The signal conditioner shall not be opened or modified. If not working, the signal conditioner shall be replaced by an equivalent device. To avoid electrical burn, electric shock or arc flash, do not install Rogowski coils on or remove them from hazardous live conductors. Any connection to the product shall fulfil the requirements for safety extra low voltage (SELV) circuits.

## IMPORTANT NOTICE

The information in this document is considered accurate and reliable. However, LEM International SA and any company directly or indirectly controlled by LEM Holding SA ("LEM") do not provide any guarantee or warranty, expressed or implied, regarding the accuracy or completeness of this information and are not liable for any consequences resulting from its use. LEM shall not be responsible for any indirect, incidental, punitive, special, or consequential damages (including, but not limited to, lost profits, lost savings, business interruption, costs related to the removal or replacement of products, or rework charges) regardless of whether such damages arise from tort (including negligence), warranty, breach of contract, or any other legal theory.

LEM reserves the right to update the information in this document, including specifications and product descriptions, at any time without prior notice. Information in this document replaces any previous versions of this document. No license to any intellectual property is granted by LEM through this document, either explicitly or implicitly. Any Information and product described herein is subject to export control regulations.

LEM products may possess either unidentified or documented vulnerabilities. It is the sole responsibility of the purchaser to design and operate their applications and products in a manner that mitigates the impact of these vulnerabilities. LEM disclaims any liability for such vulnerabilities. Customers must select products with security features that best comply with applicable rules, regulations, and standards for their intended use. The purchaser is responsible for making final design decisions regarding its products and for ensuring compliance with all legal, regulatory, and security-related requirements, irrespective of any information or support provided by LEM.

LEM products are not intended, authorized, or warranted for use in life support, life-critical, or safety-critical systems or equipment, nor in applications where failure or malfunction of an LEM product could result in personal injury, death, or significant property or environmental damage. LEM and its suppliers do not assume liability for the inclusion and/or use of LEM products in such equipment or applications; thus, this inclusion and/or use is at the purchaser's own and sole risk. Unless explicitly stated that a specific LEM product is automotive qualified, it should not be used in automotive applications. LEM does not accept liability for the inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

Applications that are described herein are for illustrative purposes only. LEM makes no representation or warranty that LEM products will be suitable for a particular purpose, a specified use or application. The purchaser is solely responsible for the design and operation of its applications and devices using LEM products, and LEM accepts no liability for any assistance with any application or purchaser product design. It is purchaser's sole responsibility to determine whether the LEM product is suitable and fit for the purchaser's applications and products planned, as well as for the planned application and use of purchaser's third-party customer(s).

Stressing and using LEM products at or above limiting values will cause permanent damage to the LEM product and potentially to any device embedding or operating with LEM product. Limiting values are stress ratings only and operation of the LEM product at or above conditions and limits given in this document is not warranted. Continuous or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the LEM product.

LEM products are sold subject to the general terms and conditions of commercial sale, as published at [www.lem.com](http://www.lem.com) unless otherwise agreed in a specific written agreement. LEM hereby expressly rejects the purchaser's general terms and conditions for purchasing LEM products by purchaser. Any terms and conditions contained in any document issued by the purchaser either before or after issuance of any document by LEM containing or referring to the general terms and conditions of sale are explicitly rejected and disregarded by LEM, and the document issued by the purchaser is wholly inapplicable to any sale or licensing made by LEM and is not binding in any way on LEM.

**© 2025 LEM INTERNATIONAL SA – All rights reserved**