

Current Transducer IT 700-SB ULTRASTAB

 $I_{\rm P\,N}$ = 700 A

For ultra-high precision measurement of current: DC, AC, pulsed..., with galvanic separation between primary and secondary.





Features

- ±10 V voltage output
- Closed loop (compensated) current transducer using an extremely accurate zero flux detector
- · Electrostatic shield between primary and secondary circuit
- 9-pin D-Sub male secondary connector
- Status signal to indicate the transducer state
- LED indicator confirms normal operation.

Advantages

- · Very high accuracy
- Excellent linearity
- Extremely low temperature variation
- Wide frequency bandwidth
- · High immunity to external fields
- No insertion losses
- Low noise on output signal
- · Low noise feedback to primary conductor.

Applications

- Feed back element in high performance gradient amplifiers for MRI
- Feedback element in high-precision, high-stability power supplies
- Calibration unit
- Energy measurement
- · Medical equipment.

Standards

- EN 61326-1: 2013
- EN 61000-6-2: 2005 / AC: 2005
- EN 61000-6-3: 2007 / A1: 2011 / AC: 2012
- EN 61010-1: 2010 / A1:2019 / AC: 2019-04
- EN IEC 61010-2-030: 2021 / A11: 2021.

Application Domains

- Industrial
- Laboratory
- Medical.

N° 88.39.54.000.0 Page 1/10





Safety



If the device is used in a way that is not specified by the manufacturer, the protection provided by the device may be compromised. Always inspect the electronics unit and connecting cable before using this product and do not use it if damaged.

Mounting assembly shall guarantee the maximum primary conductor temperature, fulfill clearance and creepage distance, minimize electric and magnetic coupling, and unless otherwise specified can be mounted in any orientation.



Caution, risk of electrical shock

This transducer must be used in limited-energy secondary circuits SELV according to IEC 61010-1, in electric/electronic equipment with respect to applicable standards and safety requirements in accordance with the manufacturer's operating specifications.

Use caution during installation and use of this product; certain parts of the module can carry hazardous voltages and high currents (e.g. power supply, primary conductor).

Ignoring this warning can lead to injury and/or cause serious damage.

De-energize all circuits and hazardous live parts before installing the product.

All installations, maintenance, servicing operations and use must be carried out by trained and qualified personnel practicing applicable safety precautions.

This transducer is a build-in device, whose hazardous live parts must be inaccessible after installation.

This transducer must be mounted in a suitable end-enclosure.

Besides make sure to have a distance of minimum 30 mm between the primary terminals of the transducer and other neighboring components.

Main supply must be able to be disconnected.

Always inspect the current transducer for damage before using this product.

Never connect or disconnect the external power supply while the primary circuit is connected to live parts.

Never connect the output to any equipment with a common mode voltage to earth greater than 30 V.

Always wear protective clothing and gloves if hazardous live parts are present in the installation where the measurement is carried out.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and are carried out with care.

The current transducer shall not be opened or modified.

If not working, the current transducer shall be replaced by an equivalent device.

This transducer is a built-in device, not intended to be cleaned with any product. Nevertheless if the user must implement cleaning or washing process, validation of the cleaning program has to be done by himself.

Do not dispose of this product as unsorted municipal waste. Contact a qualified recycler for disposal.



Caution, hot surface

Power supply cable must support a temperature of 100 $^{\circ}$ C at least and it must be fixed in a way to not be in contact with the product housing and primary conductor.





Absolute maximum ratings

Parameter	Symbol	Unit	Value
Maximum supply voltage (working) (10 50 °C)	$\pm U_{\rm C\ max}$	V	15.75
Maximum primary conductor temperature	$T_{ m B\ max}$	°C	50

Absolute maximum ratings apply at 25 °C unless otherwise noted.

Stresses above these ratings may cause permanent damage.

Exposure to absolute maximum ratings for extended periods may degrade reliability.

Environmental and mechanical characteristics

Parameter	Symbol	Unit	Min	Тур	Max	Comment
Ambient operating temperature	T_{A}	°C	10		50	
Ambient storage temperature	T_{Ast}	°C	-20		85	
Relative humidity	RH	%	20		80	Non-condensing
Mass	m	g		800		
Altitude		m			2000 1)	
Environmental conditions						Indoor
Cooling conditions						Natural convection

Note: 1) Insulation coordination at 2000 m above sea level.





Insulation coordination

Parameter	Symbol	Unit	≤ Value	Comment	
RMS voltage for AC insulation test, 50 Hz, 1 min	$U_{\sf d}$	kV	4.6	Between primary and secondary + shield	
		V DC	200	Between secondary and shield	
		V DC	500	Between secondary and status output	
Impulse withstand voltage 1.2/50 μs	U_{Ni}	kV	8.5	According to IEC 61010-1	
Clearance (pri sec.)	d_{Cl}	mm	9	Shortest distance through air	
Creepage distance (pri sec.)	d_{Cp}	mm	9	Shortest path along device body	
Case material	-	-	V0	According to UL 94	
Comparative tracking index	CTI		600		
Application example RMS voltage line-to-neutral		V	600	Reinforced insulation according to IEC 61010-1 CAT II, PD2	
Application example RMS voltage line-to-neutral		V	600	Reinforced insulation according to EN 50178 CAT III, PD2	

If insulated cable is used for the primary circuit, the voltage category could be improved with the following table (for single insulation) (IEC 61010-1 standard):

Cable insulated (primary) Category

 HAR03
 1750 V CAT III

 HAR05
 1850 V CAT III

 HAR07
 1950 V CAT III





Electrical data

At $T_{\rm A}$ = 25 °C, ± $U_{\rm C}$ = ±15 V, unless otherwise noted (see Min, Max, typ, definition paragraph in page 6).

Parameter	Symbol	Unit	Min	Тур	Max	Comment
Primary nominal DC current (continuous)	I_{PNDC}	А	-700		700	
Primary nominal AC RMS current (continuous)	$I_{ extsf{PNAC}}$	А			495	
Primary current, measuring range	I_{PM}	А	-700		700	
Secondary voltage	U_{S}	V	-10		10	
Maximum withstand primary peak current 1)	$\hat{I}_{P\;max}$	kA	-3.5		3.5	@ pulse of 100 ms
DC supply voltage	U_{C}	V	±14.25	±15	±15.75	
DC current consumption	I_{C}	mA			80 480	$@I_{P} = 0$ $@I_{P} = I_{PN}$
Electrical offset voltage + self magnetization + effect of earth magnetic field ²⁾	U_{OE}	ppm	-60		60	
Temperature coefficient of $U_{\rm OE}$ referred to primary $^{\rm 2)}$	TCU_{OE}	ppm/K	-4		4	T _A = 10 °C 50 °C
Offset stability 2)		ppm/month	-1		1	
Sensitivity	S	V/A		1/70		
Sensitivity error ²⁾	$\varepsilon_{_S}$	ppm	-50		50	
Temperature coefficient of $S^{(2)}$	TCS	ppm/K	-3		3	T _A = 10 °C 50 °C
Linearity error ²⁾	$arepsilon_{L}$	ppm	-30		30	
RMS noise current 0 10 Hz referred to primary ²⁾					1	
RMS noise current 0 100 Hz referred to primary 2)					2	
RMS noise current 0 1 kHz referred to primary 2)	I_{no}	ppm			2	
RMS noise current 0 10 kHz referred to primary 2)					5	
RMS noise current 0 50 kHz referred to primary 2)					10	
Re-injected RMS noise on primary bus bar		μV			30	0 50 kHz
Delay time to 90 % of the final output value for $I_{\rm PN}$ step	t _{D 90}	μs			1	d <i>i</i> /d <i>t</i> of 100 A/μs
Frequency bandwidth (±1 dB)	BW	kHz	0	50		Small-signal bandwidth, 0.5 % of $I_{_{\rm PM}}$
Frequency bandwidth (±3 dB)	BW	kHz	0	100		$\begin{array}{c} {\rm Small\text{-}signal} \\ {\rm bandwidth,} \\ {\rm 0.5~\%~of~} I_{\rm PM} \end{array}$

Notes:

¹⁾ Single pulse only, not AC. The transducer may require a few seconds to return to normal operation when autoreset system is running.

 $^{^{\}rm 2)}$ All ppm figures refer to nominal current $I_{\rm P\,N\,DC}.$





Definition of typical, minimum and maximum values

Minimum and maximum values for specified limiting and safety conditions have to be understood as such as well as values shown in "typical" graphs.

On the other hand, measured values are part of a statistical distribution that can be specified by an interval with upper and lower limits and a probability for measured values to lie within this interval.

Unless otherwise stated (e.g. "100 % tested"), the LEM definition for such intervals designated with "min" and "max" is that the probability for values of samples to lie in this interval is 99.73 %.

For a normal (Gaussian) distribution, this corresponds to an interval between -3 sigma and +3 sigma. If "typical" values are not obviously mean or average values, those values are defined to delimit intervals with a probability of 68.27 %, corresponding to an interval between -sigma and +sigma for a normal distribution.

Typical, maximal and minimal values are determined during the initial characterization of the product.





Overload protection - Electrical specification - Status

The overload occurs when the primary current I_p exceeds a trip level such that the fluxgate detector becomes completely saturated and, consequently, the transducer will switch from normal operation to overload mode.

This trip level is guaranteed to be greater than 110 % of I_{PNDC} and its actual value depends on operating conditions such as temperature and measuring resistance.

When this happens, the transducer will automatically begin to sweep in order to lock on the primary current again and the secondary voltage generated is a low frequency triangle waveform between -10 V and 10 V.

Under these conditions:

- The contact (normal operation status) between pin 3 and 8 (of the D-sub connector) switches off, this contact becomes open.
- The green LED indicator (normal operation status) turns off.


The measuring can resume when the primary current returns in the nominal range between $\neg I_{PNDC}$ and $+I_{PNDC}$ then the green LED indicator (normal operation status) is again lit.

Electrical data - status port

Max voltage pin 3 and pin 8, off-State100 VMax current pin 3 and pin 8, on-State1000 mAOn-State resistance pin 3 and pin 8:50 mΩ (typ)


Status/Interlock port wiring

Example of application Status/Interlock port wiring

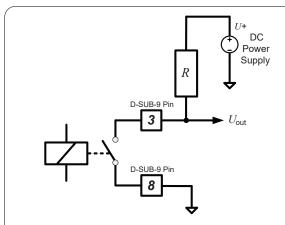

 U_{out} is Active Low

- $\rightarrow U_{\rm out}$ switches to GND when the transducer is OK (Normal operation).
- $ightarrow U_{
 m out}$ switches to U+ when the transducer is not OK (Overload mode or supply fault).

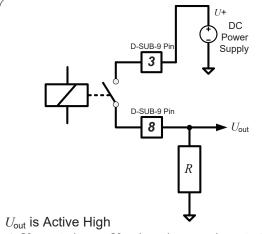


 $\rightarrow U_{\rm out}$ switches to U+ when the transducer is OK (Normal operation).

 $ightarrow U_{
m out}$ switches to GND when the transducer is not OK (Overload mode or supply fault).



Performance parameters definition

The schematic used to measure all electrical parameters is Sensitivity and linearity shown below:

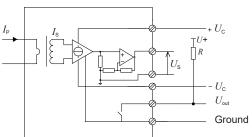

Transducer simplified model

The static model of the transducer at temperature $T_{\scriptscriptstyle A}$ is:

$$U_{\rm S} = S \cdot I_{\rm p} + \varepsilon$$

In which

$$\varepsilon$$
 = $U_{\text{O}\,\text{E}}$ at 25 °C + $U_{\text{O}\,\text{T}}(T_{\text{A}})$ + $\varepsilon_{\text{L}} \cdot I_{\text{PM}} \cdot S$

Where,

$$U_{\text{O}T}(T_{\text{A}}) = TCU_{\text{O}E} \cdot |T_{\text{A}} - 25 \text{ °C}| \cdot I_{\text{PM}} \cdot S$$

: secondary voltage (V) : sensitivity (V/A) : primary current (A)

: primary current, measuring range (A) : ambient operating temperature (°C)

: electrical offset voltage (V)

: temperature variation of $U_{\rm O\,E}$ at $T_{\rm A}({\rm V})$

: linearity error

This is the absolute maximum error. As all errors are independent, a more realistic way to calculate the error would be to use the following formula:

$$\varepsilon = \sqrt{\sum_{i=1}^{N} \varepsilon_i^2}$$

To measure sensitivity and linearity, the primary current (DC) is cycled from 0 to $I_{\rm p}$, then to $-I_{\rm p}$ and back to 0 (equally spaced $I_p/10$ steps). The sensitivity S is defined as the slope of the linear regresion linefor cycle between $\pm I_{\rm P\,N}$. The linearity error $\varepsilon_{\rm L}$ is the maximum positive or negative difference between the measured points and the linear regression line, expressed in parts per million (ppm) of full-scale which corresponds to the maximum measured value.


Electrical offset

The electrical offset voltage $U_{\mathrm{O}\,\mathrm{E}}$ is the residual output voltage when the input current is zero.

The temperature variation $U_{\mathrm{O}\ T}$ of the electrical offset voltage $U_{
m O\ E}$ is the variation of the electrical offset from 25 °C to the considered temperature.

Delay time

The delay time $t_{\rm D.90}$ with respect to the primary are shown in the next figure. It slightly depends on the primary current di/dt. It is measured at nominal current.

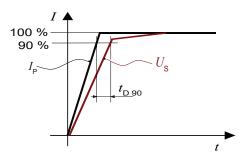


 $t_{D.90}$ (delay time @ 90 %)



Dimensions (in mm)

IT 700-SB ULTRASTAB

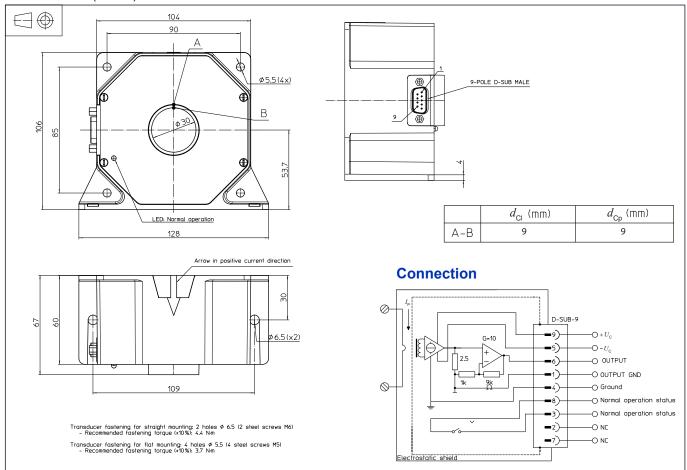

Connection

• Normal operation status (Pins 3 and 8)

Normal operation means: $-\pm 15 \text{ V } (\pm U_{\text{c}}) \text{ present}$ - zero detector is working

- compensation current

 \leq 110 % of $I_{\rm P\,N\,DC}$

- green LED indicator is lit.

Contact (Pins 3 and 8)	Description			
Closed	The transducer is OK (Normal operation)			
Open	The transducer is not OK (Overload mode or supply fault)			

Remarks

- I_S is positive when I_P flows in the direction of arrow
- The secondary cables also have to be routed together all the way
- Pin 4 should be connected to cable and connector shield to maintain lowest output noise
- Maximum temperature of the primary conductor: see page 3
- Installation of the transducer must be done unless otherwise specified on the datasheet, according to LEM Transducer Generic Mounting Rules. Please refer to LEM document N°ANE120504 available on our Web site: https://www.lem.com/en/file/3137/download

Mechanical characteristics

General tolerance ±0.5 mm

• Transducer fastening

- Straight mounting 2 holes Ø 6.5 mm 2 x M6 steel screws

Recommended fastening torque 4.4 N·m

- Flat mounting 4 holes Ø 5.5 mm

4 x M5 steel screws

Recommended fastening torque 3.7 N·m

Connection of secondary on D-SUB-9,

connector UNC 4-40

Primary through hole $\emptyset \le 30 \text{ mm}$

 All mounting recommendations are given for a standard mounting. Screws with flat and spring washers.

Page 9/10





IMPORTANT NOTICE

The information in this document is considered accurate and reliable. However, LEM International SA and any company directly or indirectly controlled by LEM Holding SA ("LEM") do not provide any guarantee or warranty, expressed or implied, regarding the accuracy or completeness of this information and are not liable for any consequences resulting from its use. LEM shall not be responsible for any indirect, incidental, punitive, special, or consequential damages (including, but not limited to, lost profits, lost savings, business interruption, costs related to the removal or replacement of products, or rework charges) regardless of whether such damages arise from tort (including negligence), warranty, breach of contract, or any other legal theory.

LEM reserves the right to update the information in this document, including specifications and product descriptions, at any time without prior notice. Information in this document replaces any previous versions of this document. No license to any intellectual property is granted by LEM through this document, either explicitly or implicitly. Any Information and product described herein is subject to export control regulations.

LEM products may possess either unidentified or documented vulnerabilities. It is the sole responsibility of the purchaser to design and operate their applications and products in a manner that mitigates the impact of these vulnerabilities. LEM disclaims any liability for such vulnerabilities. Customers must select products with security features that best comply with applicable rules, regulations, and standards for their intended use. The purchaser is responsible for making final design decisions regarding its products and for ensuring compliance with all legal, regulatory, and security-related requirements, irrespective of any information or support provided by LEM.

LEM products are not intended, authorized, or warranted for use in life support, life-critical, or safety-critical systems or equipment, nor in applications where failure or malfunction of an LEM product could result in personal injury, death, or significant property or environmental damage. LEM and its suppliers do not assume liability for the inclusion and/or use of LEM products in such equipment or applications; thus, this inclusion and/or use is at the purchaser's own and sole risk. Unless explicitly stated that a specific LEM product is automotive qualified, it should not be used in automotive applications. LEM does not accept liability for the inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

Applications that are described herein are for illustrative purposes only. LEM makes no representation or warranty that LEM products will be suitable for a particular purpose, a specified use or application. The purchaser is solely responsible for the design and operation of its applications and devices using LEM products, and LEM accepts no liability for any assistance with any application or purchaser product design. It is purchaser's sole responsibility to determine whether the LEM product is suitable and fit for the purchaser's applications and products planned, as well as for the planned application and use of purchaser's third-party customer(s).

Stressing and using LEM products at or above limiting values will cause permanent damage to the LEM product and potentially to any device embedding or operating with LEM product. Limiting values are stress ratings only and operation of the LEM product at or above conditions and limits given in this document is not warranted. Continuous or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the LEM product.

LEM products are sold subject to the general terms and conditions of commercial sale, as published at www.lem.com unless otherwise agreed in a specific written agreement. LEM hereby expressly rejects the purchaser's general terms and conditions for purchasing LEM products by purchaser. Any terms and conditions contained in any document issued by the purchaser either before or after issuance of any document by LEM containing or referring to the general terms and conditions of sale are explicitly rejected and disregarded by LEM, and the document issued by the purchaser is wholly inapplicable to any sale or licensing made by LEM and is not binding in any way on LEM.

© 2025 LEM INTERNATIONAL SA - All rights reserved