


## ART series

### Ref: ART-B22-D175/SP16

Flexible clip-around Rogowski coil for the electronic measurement of AC current with galvanic separation between the primary circuit (power) and the secondary circuit (measurement). The patented Perfect Loop Technology dramatically reduces both the error due to the position of the measured conductor within the aperture, and the error due to the proximity of external conductors.

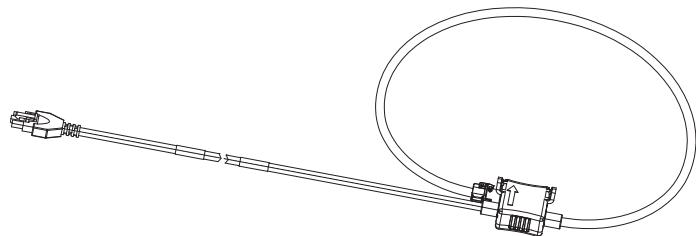

#### Features

- The most accurate coil of the market, Class 0.5 (IEC 61869-10)
- Very low positioning error
- Small external fields influence
- Low sensitivity 22.5 mV/kA to have a very thin coil for indoor application
- Electrostatic shield included for better common mode rejection of the integrator
- Protection degree IP57
- Ø 175 mm sensing aperture
- Output cable: 1.5 m.

#### Special features

- Cable end equipped with Molex Mini-Fit 5557 connector
- Dedicated traceability labels on the secondary cable.

#### Advantages

- Thin, flexible, and light weight solution
- Very good accuracy
- Does not saturate with overcurrent and short circuit currents
- Excellent immunity to electromagnetic interferences
- Fast and easy installation.

Note: <sup>1)</sup> Performance standards: ART-B22 only partially fulfills this standard as a Rogowski coil has fundamental differences compared to current transformers.

#### Applications

- Secondary distribution substations
- Distribution transformer monitoring
- Phasor Measurement Units (PMU)
- Commercial and industrial buildings
- Metering and sub-metering
- Demand response (DR)
- Distribution system equipment.

#### Standards

- IEC 61010-1: 2010
- IEC 61010-2-32: 2012
- IEC 61869-10: 2017 <sup>1)</sup>
- UL 61010-1: 2012.

#### Application Domains

- Industrial
- Smart Grid.

## Safety



Caution

If the device is used in a way that is not specified by the manufacturer, the protection provided by the device may be compromised. Always inspect the current sensor unit and connecting cable before using this product and do not use it if damaged (for example, if the contrasting color of the flexible rope is visible).

Mounting assembly shall guarantee the maximum primary busbar temperature, fulfill clearance and creepage distance, minimize electric and magnetic coupling, and unless otherwise specified can be mounted in any orientation.



Caution, risk of electrical shock

This current sensor must be used in electric/electronic equipment with respect to applicable standards and safety requirements in accordance with the manufacturer's operating specifications.

This current sensor is intended for use in an electrical installation with restricted access.

Therefore, in normal operation, it is not accessible. For installation or in maintenance phases, it is accessible only to qualified person.

It is intended to be connected onto SELV equipment input, of up to 30 V RMS.

When operating, certain parts of the current sensor can carry hazardous voltages (e.g. primary busbar, power supply).

De-energize all circuits and hazardous live parts before installing the product.

All installations, maintenance, servicing operations and use must be carried out by trained and qualified personnel practicing applicable safety precautions.

If the current sensor is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Ignoring this warning can lead to injury and/or cause serious damage.

This current sensor is a build-in device, whose hazardous live parts must be inaccessible after installation.

This current sensor must be mounted in a suitable end-enclosure.

Use caution during installation, use and uninstalling of this product; high voltages and currents, high temperature (above 70 °C) may be present inside the electrical equipment.

Use personal protective equipment (clothes, gloves, ...).

This current sensor is a built-in device, not intended to be cleaned with any product. Nevertheless if the user must implement cleaning or washing process, validation of the cleaning program has to be done by himself.

Do not dispose of this product as unsorted municipal waste. Contact a qualified recycler for disposal.



Risk of electrical shock

Do not apply around or remove from uninsulated hazardous live conductors which may result in electric shock, electric burn or arc flash.



Equipment protected throughout by double insulation or reinforced insulation.



ESD susceptibility

The product is susceptible to be damaged from an ESD event and the personnel should be grounded when handling it.

## Absolute maximum ratings

Parameter	Symbol	Unit	Value
Maximum secondary voltage	$U_{S\ max}$	V	30
Maximum primary conductor temperature	$T_{B\ max}$	°C	105

Stresses above these ratings may cause permanent damage.  
Exposure to absolute maximum ratings for extended periods may degrade reliability.

## UL 61010-1: Ratings and assumptions of certification

File # E330077 , Vol.D1

### Standards

- UL 61010-1, Third Edition, May 11, 2012, Revised April 29, 2016
- CAN/CSA-C22.2 No. 61010-1-12, 3rd Edition, Revision dated April 29, 2016
- IEC 61010-2-032: 2012 (Third Edition), UL 61010-2-032 (IEC 61010-2-032:2012).

### Ratings

Rated insulation voltage AC 1000 V, 50/60 Hz, CAT III, 2000 A.

### Engineering conditions of acceptability

*When installed in an end-product, consideration must be given to the following:*

- ART series has been investigated as Type B current sensors according IEC 61010-2-032 3rd ed.
- The devices have been evaluated for overvoltage category III and pollution degree 2 environment use only.

*For ART series, the need for the following shall be considered in the end-product:*

- Markings and documentation that comply with Clause 5.
- The following tests shall be performed in the end-product evaluation: Dielectric Strength.
- The unit is considered acceptable for use in a max ambient of 80 °C for ART series.
- A suitable enclosure shall be provided in the end-use application.
- The terminals have not been evaluated for field wiring.
- Primary conductor or busbar temperature should never exceed 100 °C.

## Insulation coordination

Parameter	Symbol	Unit	≤ Value	Comment
RMS voltage for AC insulation test, 50 Hz, 1 min	$U_d$	kV	7.4	
Impulse withstand voltage 1.2/50 $\mu$ s	$U_{NI}$	kV	12.8	
Partial discharge RMS test voltage ( $q_m < 10$ pC)	$U_t$	kV	1.65	According to IEC 60664- 1
Clearance (pri. - sec.)	$d_{CI}$	mm	> 16	Shortest distance through air
Creepage distance (pri. - sec.)	$d_{CP}$	mm	> 16	Shortest path along device body
Case material	-	-	V0	According to UL 94
Comparative tracking index	CTI		600	
Application example RMS voltage line-to-neutral		V	1000	Basic insulation according to IEC 61010-1 CAT IV, PD2
Application example RMS voltage line-to-neutral		V	1000	Reinforced insulation according to IEC 61010-1 CAT III, PD2

## Environmental and mechanical characteristics

Parameter	Symbol	Unit	Min	Typ	Max	Comment
Ambient operating temperature	$T_A$	°C	-40		80	
Ambient storage temperature	$T_{A\text{st}}$	°C	-40		80	
Relative humidity (non-condensing)	$RH$	%	0		90	
Altitude above sea level		m			2000	
Mass Ø 175	$m$	g		138		Cable length: 1.5 m

## Electrical data ART-B22-D175/SP16

At  $T_A = 25^\circ\text{C}$ ,  $R_L = 10 \text{ k}\Omega$ , unless otherwise noted.

Parameter	Symbol	Unit	Min	Typ	Max	Comment
Rated primary current	$I_{Pr}$	A				Not applicable <sup>1)</sup>
Rated short-time thermal current	$I_{th}$	kA		300		@ 50 Hz <sup>2)</sup>
Rated transformation ratio	$k_r$	kA/V		44.44		@ 50 Hz
Rated frequency	$f_r$	Hz		50/60		
Secondary voltage	$U_s$	mV		22.5		@ 50 Hz, $I_p = 1 \text{ kA}$
Mutual inductance	$M$	nH		72.31		
Temperature coefficient of $M$	$TCM$	ppm/k		±30		
Frequency bandwidth (-3 dB)	$BW$	kHz		350		<sup>3)</sup> Cable length: 1.5 m
Phase displacement <sup>4)</sup> @ 50/60 Hz	$\Delta\phi$	°		0.004		<sup>3)</sup>
Coil inductance	$L_s$	µH		343		
Coil resistance	$R_s$	Ω		105		
Ratio error (centered)	$\varepsilon$	%	-0.5		0.5	Class 0.5 accuracy according to IEC 61869-10
Ratio error (all positions)	$\varepsilon$	%	-0.75		0.75	<sup>5)</sup> Including positioning error
Linearity error	$\varepsilon_L$	%		None		
Error due to magnetic field of external conductor current	$\varepsilon_{I_{ext}}$	%		±0.2	±0.4	<sup>6)</sup>

Notes: <sup>1)</sup> The Rogowski coil can measure any primary current as there is no saturation effect.

<sup>2)</sup> Not tested given that in the worst case (load = 0 Ohm i.e. short circuit on the output) the peak dissipated power remains low (< 2 Watts).

<sup>3)</sup> Frequency bandwidth and phase shift modeling schematic can be provided on request.

<sup>4)</sup> Referring to the main phase offset of 90 ° (a Rogowski coil is a derivative current transducer).

<sup>5)</sup> Considering a primary conductor of at least Ø15 mm, perpendicular and on contact with the Rogowski coil.

<sup>6)</sup> Considering an external conductor of at least Ø15 mm the same current level than internal conductor, perpendicular and on contact with the Rogowski coil.

## Definition of typical, minimum and maximum values

Minimum and maximum values for specified limiting and safety conditions have to be understood as such as well as values shown in "typical" graphs.


On the other hand, measured values are part of a statistical distribution that can be specified by an interval with upper and lower limits and a probability for measured values to lie within this interval.

Unless otherwise stated (e.g. "100 % tested"), the LEM definition for such intervals designated with "min" and "max" is that the probability for values of samples to lie in this interval is 99.73 %.


For a normal (Gaussian) distribution, this corresponds to an interval between -3 sigma and +3 sigma. If "typical" values are not obviously mean or average values, those values are defined to delimit intervals with a probability of 68.27 %, corresponding to an interval between -sigma and +sigma for a normal distribution.

Typical, minimum and maximum values are determined during the initial characterization of the product.

## Name and codification

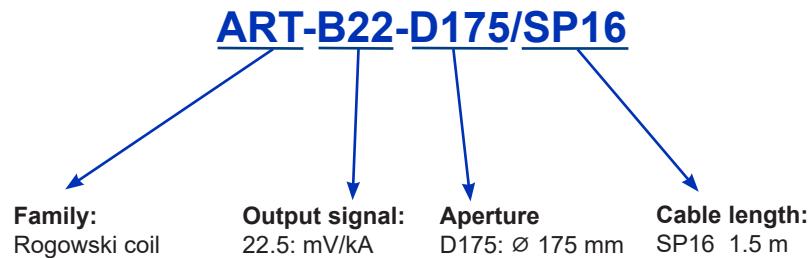

## Accuracy class according to IEC 61869-10

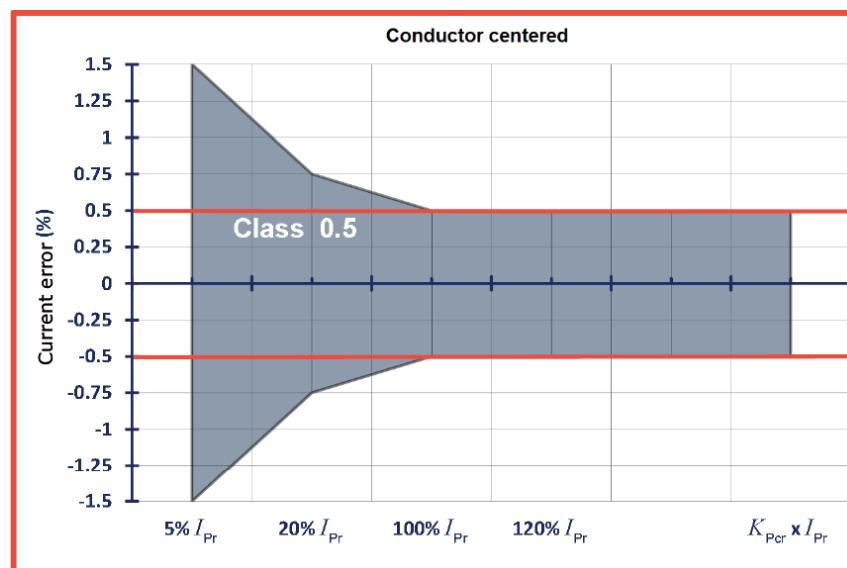

 Accuracy class limit of IEC 61869-10

 Accuracy class limit of ART-B22 Rogowski

## Terms and definitions

### Rated transformation ratio $k_r$

$k_r$  is the ratio between the primary current  $I_p$  and the secondary voltage  $U_s$ .

$$k_r = \frac{I_p}{U_s}$$

### Ratio error $\varepsilon$

The current ratio error, expressed as a percentage, is defined by the formula:

$$\varepsilon = \frac{k_r U_s - I_p}{I_p} \times 100 \%$$

Where:

$k_r$ : is the rated transformation ratio

$I_p$ : is the actual primary current

$U_s$ : is the actual secondary voltage when  $I_p$  is flowing

### Phase displacement $\Delta\phi$

The  $\Delta\phi$  is the difference in phase between the primary current and the ideal secondary voltage phasors. The direction of the phasors being that the angle is 90 ° (leading) for an ideal Rogowski coil.

The phase displacement is said to be positive when the secondary voltage phasor leads the primary current phasor.

### Linearity error $\varepsilon_L$

The linearity error  $\varepsilon_L$  is the maximum positive or negative difference between the measured points and the linear regression line, expressed as a percentage of  $I_{Pr}$ .

### Rated short-time thermal current $I_{th}$

Maximum value of the primary current which the Rogowski will withstand for a specified short time without suffering harmful effects.

### Crosstalk error $\varepsilon_{XT}$

The crosstalk error defines how an external current passing in a close proximity to the product influences its performance. The crosstalk error expressed in percentage is given by the formula:


$$\varepsilon_{XT} = \frac{S_{XT} - S_{ref}}{S_{ref}} \times 100 \%$$

Where:

$S_{ref}$ : is the sensitivity of the product measured in the center

$S_{XT}$ : is the sensitivity of the product measured within external conductor of at least 15 mm and with the same current level than internal conductor, perpendicular and in contact with the Rogowski coil.

## Dimensions (in mm)

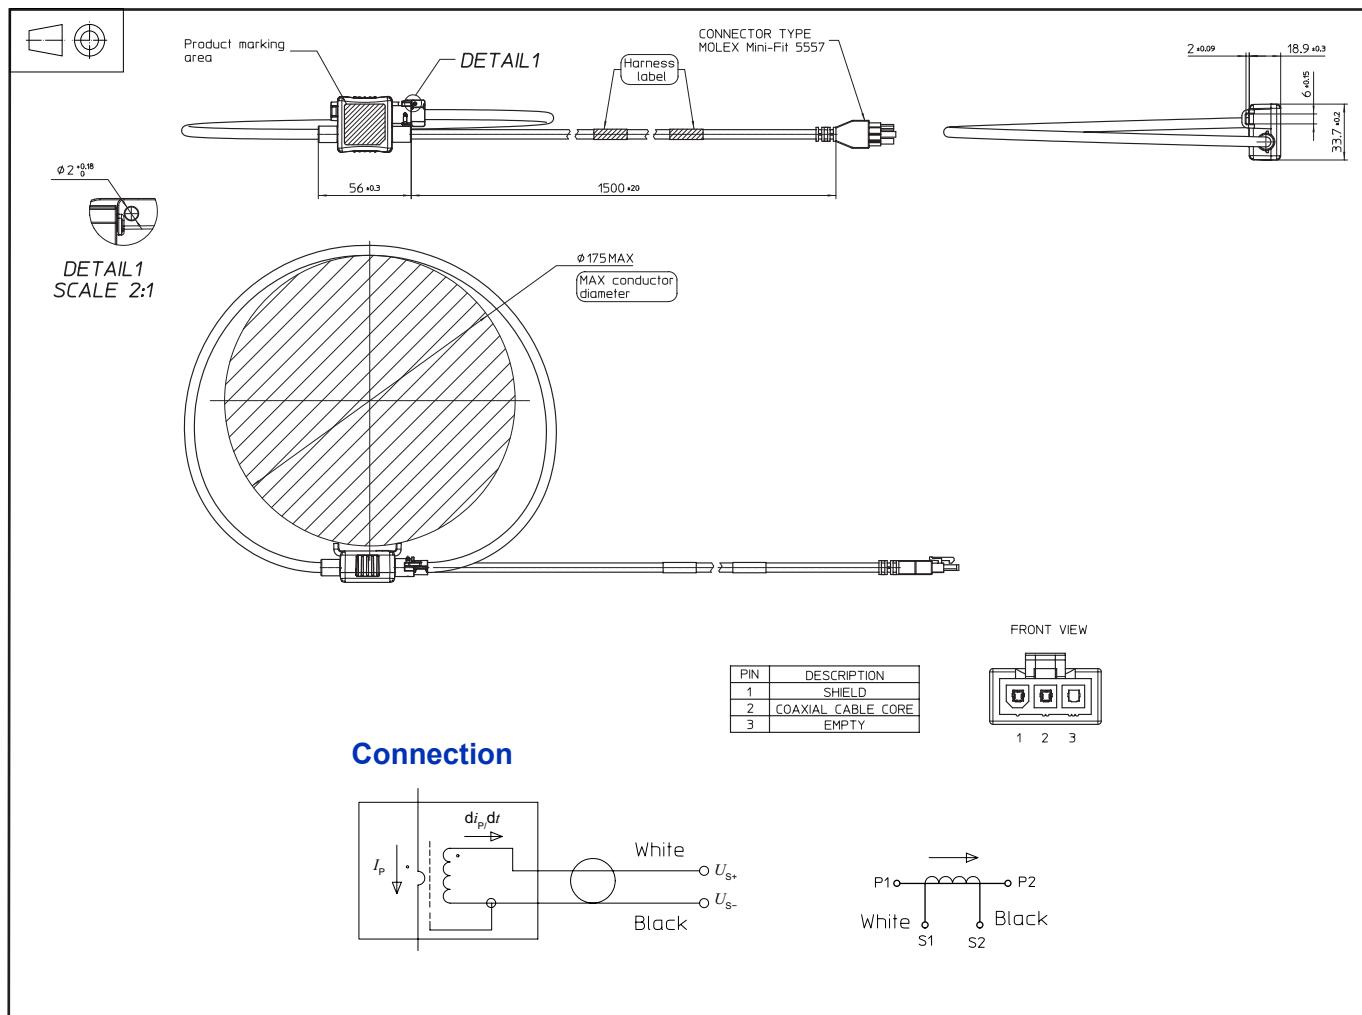

## Mechanical characteristics

- General tolerance  $\pm 1 \text{ mm}$
- Output cable length 1.5 m
- Termination Crimping terminal Molex Mini-Fit 5556-39000073  
Housing Molex Mini-Fit 5557-39014030
- Cable tie maximum effort 50 N

## Remarks

- $U_s = U_{s+} - U_{s-}$  is positive when an increasing primary current  $di_p/dt$  flows in the direction of the arrow
- Due to low positioning error ( $\varepsilon_{\text{POS}}$ ), the device does not need to be physically fastened around the primary conductor. Should the device be secured, make sure no mechanical stress is applied to the coil itself.
- This product is not intended for outdoor use.
- Installation of the transducer must be done unless otherwise specified on the datasheet, according to LEM Transducer Generic Mounting Rules. Please refer to LEM document N°ANE120504 available on our Web site: <https://www.lem.com/en/file/3137/download>

## IMPORTANT NOTICE

The information in this document is considered accurate and reliable. However, LEM International SA and any company directly or indirectly controlled by LEM Holding SA ("LEM") do not provide any guarantee or warranty, expressed or implied, regarding the accuracy or completeness of this information and are not liable for any consequences resulting from its use. LEM shall not be responsible for any indirect, incidental, punitive, special, or consequential damages (including, but not limited to, lost profits, lost savings, business interruption, costs related to the removal or replacement of products, or rework charges) regardless of whether such damages arise from tort (including negligence), warranty, breach of contract, or any other legal theory.

LEM reserves the right to update the information in this document, including specifications and product descriptions, at any time without prior notice. Information in this document replaces any previous versions of this document. No license to any intellectual property is granted by LEM through this document, either explicitly or implicitly. Any information and product described herein is subject to export control regulations.

LEM products may possess either unidentified or documented vulnerabilities. It is the sole responsibility of the purchaser to design and operate their applications and products in a manner that mitigates the impact of these vulnerabilities. LEM disclaims any liability for such vulnerabilities. Customers must select products with security features that best comply with applicable rules, regulations, and standards for their intended use. The purchaser is responsible for making final design decisions regarding its products and for ensuring compliance with all legal, regulatory, and security-related requirements, irrespective of any information or support provided by LEM.

LEM products are not intended, authorized, or warranted for use in life support, life-critical, or safety-critical systems or equipment, nor in applications where failure or malfunction of an LEM product could result in personal injury, death, or significant property or environmental damage. LEM and its suppliers do not assume liability for the inclusion and/or use of LEM products in such equipment or applications; thus, this inclusion and/or use is at the purchaser's own and sole risk. Unless explicitly stated that a specific LEM product is automotive qualified, it should not be used in automotive applications. LEM does not accept liability for the inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

Applications that are described herein are for illustrative purposes only. LEM makes no representation or warranty that LEM products will be suitable for a particular purpose, a specified use or application. The purchaser is solely responsible for the design and operation of its applications and devices using LEM products, and LEM accepts no liability for any assistance with any application or purchaser product design. It is purchaser's sole responsibility to determine whether the LEM product is suitable and fit for the purchaser's applications and products planned, as well as for the planned application and use of purchaser's third-party customer(s).

Stressing and using LEM products at or above limiting values will cause permanent damage to the LEM product and potentially to any device embedding or operating with LEM product. Limiting values are stress ratings only and operation of the LEM product at or above conditions and limits given in this document is not warranted. Continuous or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the LEM product.

LEM products are sold subject to the general terms and conditions of commercial sale, as published at [www.lem.com](http://www.lem.com) unless otherwise agreed in a specific written agreement. LEM hereby expressly rejects the purchaser's general terms and conditions for purchasing LEM products by purchaser. Any terms and conditions contained in any document issued by the purchaser either before or after issuance of any document by LEM containing or referring to the general terms and conditions of sale are explicitly rejected and disregarded by LEM, and the document issued by the purchaser is wholly inapplicable to any sale or licensing made by LEM and is not binding in any way on LEM.

© 2025 LEM INTERNATIONAL SA – All rights reserved