

Current Transducer IN 400-S

 $I_{\rm P\,N}$ = 400 A

For the electronic measurement of current: DC, AC, pulsed..., with galvanic separation between the primary and the secondary circuit.





Features

- Closed loop (compensated) current transducer using an extremely accurate zero flux detector
- 9-pin D-Sub male secondary connector
- Status signal to indicate the transducer state
- LED indicator confirms normal operation
- Metal housing to improve immunity and EMC & power dissipation
- Operating temperature -40 °C to 85 °C
- Transducer identification
- Large aperture Ø 28 mm for cables and busbars.

Advantages

- Very high accuracy
- Excellent linearity
- Extremely low temperature drift
- Wide frequency bandwidth
- High immunity to external fields
- No insertion losses
- · Very low noise on output signal
- · Low noise feedback to primary conductor.

Applications

- Feedback element in high performance gradient amplifiers for MRI
- Feedback element in high-precision, high-stability power supplies
- Calibration unit
- Energy measurement
- Medical equipment.

Standards

- UL 61010-1: 2012/Rev. 2019
- UL 61010-2-030: 2017

IEC 61010-1

EMC:

- IEC 61000-6-2: 2016
- IEC 61000-6-3: 2006 + A1 (2010)

Safety:

- IEC 61010-2-030: 2017
- IEC 61010-1:2010/AMD1: 2016.

Application Domains

- Industrial
- Laboratory
- Medical.

N° 97.N6.48.000.0 Page 1/1.



Safety IN 400-S



If the device is used in a way that is not specified by the manufacturer, the protection provided by the device may be compromised. Always inspect the electronics unit and connecting cable before using this product and do not use it if damaged.

Mounting assembly shall guarantee the maximum primary conductor temperature, fulfill clearance and creepage distance, minimize electric and magnetic coupling, and unless otherwise specified can be mounted in any orientation.



Caution, risk of electrical shock

This transducer must be used in limited-energy secondary circuits SELV according to IEC 61010-1, in electric/electronic equipment with respect to applicable standards and safety requirements in accordance with the manufacturer's operating specifications.

Use caution during installation and use of this product; certain parts of the module can carry hazardous voltages and high currents (e.g. primary conductor).

Ignoring this warning can lead to injury and/or cause serious damage.

De-energize all circuits and hazardous live parts before installing the product.

All installations, servicing operations and use must be carried out by trained and qualified personnel practicing applicable safety precautions.

This transducer is a built-in device, no maintenance required; cleaning by dry compressed air is authorized.

This transducer is a build-in device, whose hazardous live parts must be inaccessible after installation.

This transducer must be mounted in a suitable end-enclosure.

Besides make sure to have a distance of minimum 30 mm between the primary conductor (return bar) and the transducer and other neighboring components.

Main supply must be able to be disconnected.

Always inspect the current transducer for damage before using this product.

Never connect or disconnect the external power supply while the primary circuit is connected to live parts.

Never connect the output to any equipment with a common mode voltage to earth greater than 30 V.

Always wear protective clothing and gloves if hazardous live parts are present in the installation where the measurement is carried out.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and are carried out with care.

The current transducer shall not be opened or modified.

If not working, the current transducer shall be replaced by an equivalent device.



ESD susceptibility

The product is susceptible to ESD damage if the secondary (D-Sub) connector pins are touched without being properly grounded.



Caution, hot surface

Power supply cable must support a temperature of 100 °C at least and it must be fixed in a way to not be in contact with the product housing and primary conductor.

Do not dispose of this product as unsorted municipal waste. Contact a qualified recycler for disposal.



Underwriters Laboratory Inc. recognized component.





Absolute maximum ratings

Parameter	Symbol	Unit	Value
Maximum supply voltage (working) (-40 85 °C)	$\pm U_{\rm C\ max}$	V	16.5
Maximum primary conductor temperature	$T_{ m B\ max}$	°C	100
Electrostatic discharge voltage (HBM - Human Body Model)	$U_{\rm ESD\; HBM}$	kV	2

Absolute maximum ratings apply at 25 °C unless otherwise noted.

Stresses above these ratings may cause permanent damage.

Exposure to absolute maximum ratings for extended periods may degrade reliability.

UL 61010: Standards and marking

File # E330077- Vol. 2.

Standards

- UL 61010-1: 2012 Revised July, 2019 (Third Edition)/ CAN/CSA-C22.2 No. 61010-1(2012-05)
- UL 61010-2-030: 2017 (Second Edition).

Marking

Only those products bearing the UL or UR Mark should be considered to be Listed or Recognized and covered under UL's Follow-Up Service. Always look for the Mark on the product.

Environmental and mechanical characteristics

Parameter	Symbol	Unit	Min	Тур	Max	Comment
Ambient operating temperature	T_{A}	°C	-40		85	
Ambient storage temperature	T_{Ast}	°C	-40		85	
Relative humidity	RH	%	20		80	Non-condensing
Mass	m	g		305		
Altitude 1)		m			2000	
Environmental conditions						Indoor
Cooling conditions						Natural convection
Degree of protection against mechanical impacts				IK06		With busbar completely filling the aperture

Insulation coordination

Parameter	Symbol	Unit	≤ Value	Comment
RMS voltage for AC insulation test, 50 Hz, 1 min	U_{d}	kV	4.95	Between primary and secondary + shield, according to IEC 61010-1
Impulse withstand voltage 1.2/50 μs	U_{Ni}	kV	8	According to IEC 61010-1
Partial discharge RMS test voltage $(q_m < 10 \text{ pC})$	$U_{\mathrm{PD}\mathrm{t}}$	V	1900	According to IEC 61010-1
Clearance (pri sec.) 2)	d_{CI}	mm	11.2	Shortest distance through air
Creepage distance (pri sec.) 2)	d_{Cp}	mm	11.2	Shortest path along device body
Case material	-	-	V0	According to UL 94
Comparative tracking index	CTI		600	
Application RMS voltage line-to-neutral		V	1000	Reinforced insulation according to IEC 61010-1 CAT II, PD2 With non insulated busbar completely filling the aperture

Notes:

¹⁾ Insulation coordination at 2000 m

²⁾ Mating connector not included in this calculation, which can degrade Clearance and Creepage distance depending on the material and dimensions of said mating connector.



Electrical data IN 400-S

At $T_{\rm A}$ = 25 °C, $\pm U_{\rm C}$ = ± 15 V DC, unless otherwise noted (see Min, Max, typ, definition paragraph in page 5).

Parameter	Symbol	Unit	Min	Тур	Max	Comment
Primary nominal DC current (continuous)	I_{PNDC}	А	-400		400	T _A = −40 85 °C
Primary nominal AC RMS current (continuous)	$I_{ extsf{PNAC}}$	А	-400		400	$T_A = -40 \dots 85 ^{\circ}\text{C};$ see figure 6
Peak primary current, measuring range	\hat{I}_{PM}	А	-600		600	With $\pm U_{\rm C}$ = 14.25 V, $T_{\rm A}$ = -40 85 °C, $R_{\rm M}$ = 2 Ω see page 5, see figure 1, figure 6
Measuring resistance	R_{M}	Ω	0		3	See figures 1, 2 and page 5 for other values
Secondary nominal RMS current	I_{SN}	А	≈-0.266		≈0.266	
Maximum withstand primary peak current 1)	$\hat{I}_{\rm Pmax}$	kA			20	Non repetitive pulse 500 ms
Resistance of secondary winding	$R_{\rm S}$	Ω		21.2		@ 25 °C
Number of secondary turns	N_{S}			1500		
DC supply voltage	$+U_{\rm C}$	V	14.25	15	15.75	
DC supply voltage	- <i>U</i> _c	V	-14.25	-15	-15.75	
				0.12		@ I _P = 0
DC current consumption —	$+I_{C}$	А		0.387		\bigcirc $I_{P} = I_{PN}$
				0.52		\bigcirc $I_{P} = I_{PM}$
	-I _C	А		0.07		@ I _P = 0
DC current consumption				0.337		\bigcirc $I_{P} = I_{PN}$
				0.47		\bigcirc $I_{P} = I_{PM}$
RMS noise current 0 100 Hz referred to primary 2)				0.1	0.4	
RMS noise current 0 1 kHz referred to primary 2)	I_{no}	ppm		0.15	0.5	
RMS noise current 0 10 kHz referred to primary 2)				0.8	3	
RMS noise current 0 100 kHz referred to primary $^{2)}$				4	15	
Peak-to-peak noise current 2)	$I_{no\;pp}$	ppm		38	75	See figure 7
Re-injected RMS noise on primary busbar		μV			10	
Fluxgate excitation frequency		kHz		31.25		T _A = −40 85 °C
Electrical offset current referred to primary 2)	I _{OE}	ppm	-8		8	@ 25 °C
Temperature coefficient of I_{OE} referred to primary 2)	TCI _{OE}	ppm/K	-0.1	0.05	0.1	T _A = −40 85 °C
Offset stability 2)		ppm/month	-0.1		0.1	
Linearity error ²⁾		nnm	-0.5	0.25	0.5	
Lineality error -	ε_{L}	ppm	-0.8		0.8	T _A = −40 85 °C
Delay time to 10 % of the final output value for $I_{\rm PN}$ step	t _{D 10}	ns			< 200	See figures 3 and 4
Delay time to 90 % of the final output value for $I_{\rm PN}$ step	t _{D 90}	ns			< 200	di/dt of 100 A/μs
Frequency bandwidth (±1 dB)				750		Small-signal
Frequency bandwidth (±3 dB)	BW	kHz		800		bandwidth, 1.5 % of I_{PN} see figure 5
Start-up time	$t_{ m start}$	s			< 1	
Resistance value for transducer identification		kΩ		33		
		1				l .

Notes: 1) Single pulse only, not AC. The transducer may require a few seconds to return to normal operation when autoreset system is running; 2) All ppm figures refer to full-scale which corresponds to a secondary nominal RMS current.



Definition of typical, minimum and maximum values

Minimum and maximum values for specified limiting and safety conditions have to be understood as such as well as values shown in "typical" graphs.

On the other hand, measured values are part of a statistical distribution that can be specified by an interval with upper and lower limits and a probability for measured values to lie within this interval.

Unless otherwise stated (e.g. "100 % tested"), the LEM definition for such intervals designated with "min" and "max" is that the probability for values of samples to lie in this interval is 99.73 %.


For a normal (Gaussian) distribution, this corresponds to an interval between -3 sigma and +3 sigma. If "typical" values are not obviously mean or average values, those values are defined to delimit intervals with a probability of 68.27 %, corresponding to an interval between -sigma and +sigma for a normal distribution.

Typical, maximal and minimal values are determined during the initial characterization of the product.

Power supply and load

In order to reach the measuring range according to the maximum measuring resistor, be careful with the setup measurement when wires length are high. It means that:

- the wires resistance could be not negligible
- the voltage at the output of the DC power supply and the voltage at the transducer could be significantly different.

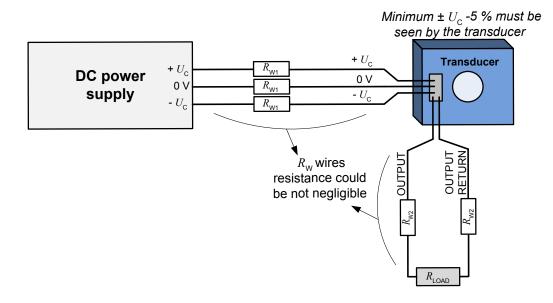

 $R_{\rm w}$ wire resistance in Ω is:

$$R_{\rm W} = \rho \, \frac{\ell}{A_{\rm W}}$$

 A_w : Cross section of wire in m²

 ℓ : Wire length in m

ρ: Resistivity of material in Ω.m

Total measuring resistance is:

$$R_{\rm M} = R_{\rm L} + 2 \times R_{\rm W1} + 2 \times R_{\rm W2}$$

If
$$R_{\text{W1}} = R_{\text{W2}} = R_{\text{W}}$$
 then $R_{\text{M}} = R_{\text{L}} + 4 \times R_{\text{W}}$



Transducer protection

By-design protection system

The transducer is designed to protect itself from typical fault conditions:

- Unit is not powered and secondary circuit is open or closed
- · Unit is powered and secondary circuit is open or interrupted

The transducer can withstand primary current of up to 5 times I_{PN} (both in DC and AC) without damaging the electronics. Notice that the sensor core can be magnetized in the above mentioned cases, leading to a small change in output offset current.

Overload protection

The overload occurs when the primary current I_p exceeds a trip level such that the fluxgate detector becomes completely saturated and, consequently, the transducer will switch from normal operation to overload mode.


This trip level is guaranteed to be greater than I_{PM} and its actual value depends on operating conditions such as temperature and measuring resistance.


When this happens, the transducer will automatically begin to sweep in order to lock on the primary current again.

The output will be force to 0 V, so the burden will be short-circuited.

The overload conditions will be:

- Pin 6 is forced to 0 V.
- The signal normal operation status (between pin 3 and 8 of the D-Sub connector) is open.
- The green LED indicator (normal operation status) turns off.

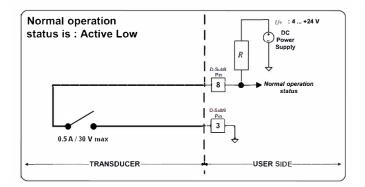

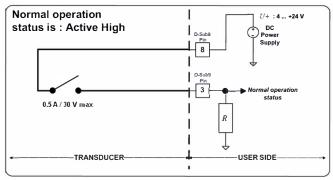


The measuring can resume when the primary current returns in the measuring range (see measuring range figures in <u>page 7</u>). Then the signal normal operation status switches to GND and the green LED indicator (normal operation status) is closed.

Status/Interlock port wiring

The following table shows how the normal operation status acts as below:

Status	Value	Description
Active Low	0 V	The transducer is OK (Normal operation)
U+	U+	The transducer is not OK (Overload mode or supply fault)
Active High	U+	The transducer is OK (Normal operation)
Active riigii	0 V	The transducer is not OK (Overload mode or supply fault)




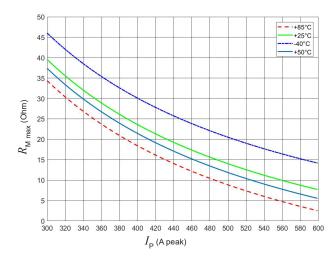

 $I_{\rm P}$ (A RMS)

Figure 1: Measuring range at ±14.25 V considering peak current

Figure 2: Measuring range at ±14.25 V considering RMS current

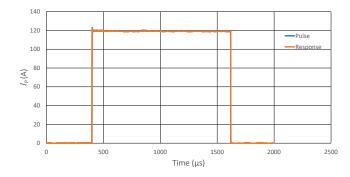

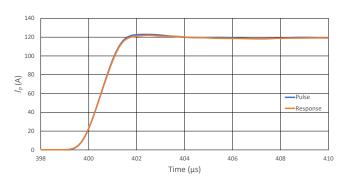


Figure 3: Typical transducer pulse response at 25 $^{\circ}\text{C}$ with 10 Ω burden

Figure 4: Zoom on figure 3

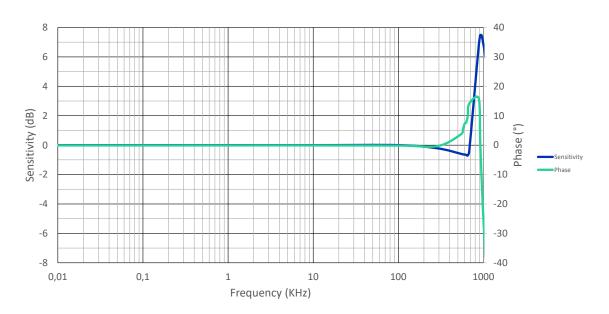


Figure 5: Typical transducer bandwidth response at 25 °C under 1.5 Ω



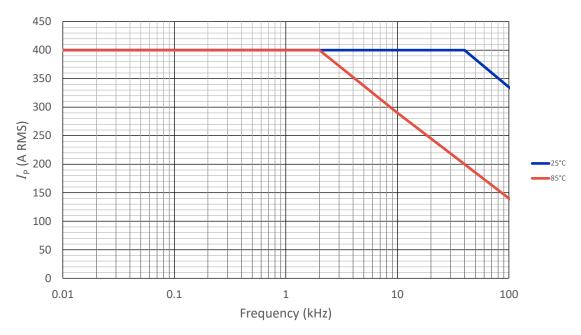


Figure 6: Derating curve


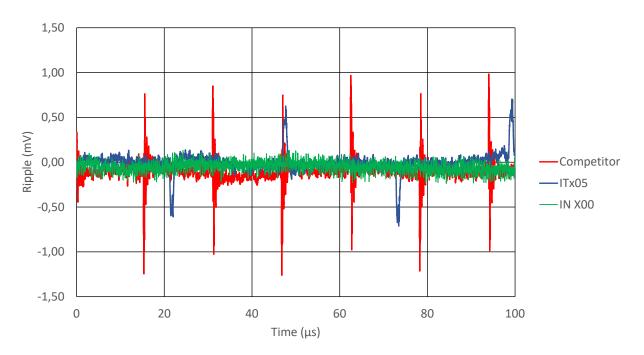


Figure 7: Ripple waveform with a 10 Ω burden on a scope



Terms and definitions

The schematic used to measure all electrical parameters is shown below:



Ampere-turns and amperes

The transducer is sensitive to the primary current linkage $\Theta_{\rm P}$ (also called ampere-turns).

$$\Theta_{\mathsf{P}} = N_{\mathsf{P}} \cdot I_{\mathsf{P}}$$

Where $N_{\rm p}$ is the number of primary turn (depending on the connection of the primary jumpers).

Caution: As most applications will use the transducer with only one single primary turn ($N_{\rm p}=1$), much of this datasheet is written in terms of primary current instead of current linkages. However, the ampere-turns (A) unit is used to emphasis that current linkages are intended and applicable.

Simplified transducer model

The static model of the transducer with current output at temperature $T_{\rm A}\,{\rm is}:$

$$I_{\rm S} \stackrel{\rm A}{=} S \cdot \Theta_{\rm p} \cdot (1 + \varepsilon)$$

In which (referred to primary):

$$\varepsilon \cdot \Theta_{\mathsf{P}} = I_{\mathsf{OE}} + I_{\mathsf{OT}} + \varepsilon_{\mathsf{S}} \cdot \Theta_{\mathsf{P}} + \varepsilon_{\mathsf{ST}} \cdot \Theta_{\mathsf{P}} + \varepsilon_{\mathsf{L}} (\Theta_{\mathsf{Pmax}}) \cdot \Theta_{\mathsf{Pmax}} + I_{\mathsf{OM}}$$

 $\varTheta_{\rm P}$ = $N_{\rm P}$ $\cdot I_{\rm P}$: primary current linkage (A)

 $\Theta_{\mathrm{P\,max}}$: maximum primary current linkage applied to the

transducer

 $I_{\rm S}$: secondary current (A) S : sensitivity of the transducer

 $T_{\rm A}$: ambient operating temperature (°C)

 $\begin{array}{lll} I_{\rm O\,E}^{\rm A} & : {\rm electrical~offset~current~(A)} \\ I_{\rm O\,M} & : {\rm magnetic~offset~current~(A)} \\ I_{\rm O\,7} & : {\rm temperature~variation~of~} I_{\rm O\,E} \, ({\rm A}) \end{array}$

 ε_s : sensitivity error at 25 °C

 $\begin{array}{ll} \varepsilon_{_{S\, T}} & : \text{ thermal drift of } S \\ \varepsilon_{_{\rm I}}(\Theta_{_{\rm P\,max}}) & : \text{ linearity error for } \Theta_{_{\rm P\,max}} \end{array}$

This model is valid for primary ampere-turns $\Theta_{\rm p}$ between $-\Theta_{\rm p\,max}$ and $+\Theta_{\rm p\,max}$ only.

This is the absolute maximum error. As all errors are independent, a more realistic way to calculate the error would be to use the following formula:

$$\varepsilon = \sqrt{\sum_{i=1}^{N} \varepsilon_i^2}$$

Total error referred to primary

The total error $\varepsilon_{\rm tot}$ is the error at $\pm I_{\rm P\,N}$, relative to the rated value $I_{\rm P\,N}$.

It includes all errors mentioned above

- the electrical offset I_{OE}
- the magnetic offset I_{OM}
- the sensitivity error ε_s
- the linearity error ε_I (to I_{P N}).

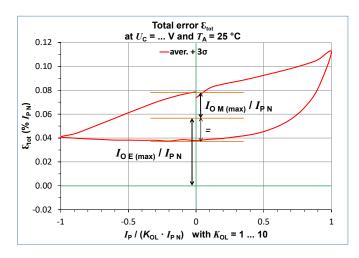


Figure 8: Total error ε_{tot}

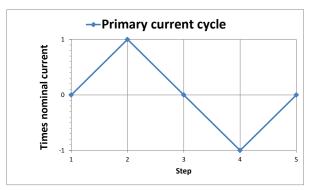


Figure 9: Current cycle used to measure magnetic and electrical offset (transducer supplied)

Electrical offset referred to primary

Using the current cycle shown in figure 9, the electrical offset current $I_{\rm O\,E}$ is the residual output referred to primary when the input current is zero.

$$I_{OE} = \frac{I_{P(3)} + I_{P(5)}}{2}$$

The temperature variation $I_{\rm O\ T}$ of the electrical offset current $I_{\rm O\ E}$ is the variation of the electrical offset from 25 °C to the considered temperature.

$$I_{\mathsf{O}\,T}\left(T\right) = I_{\mathsf{O}\,\mathsf{E}}\left(T\right) - I_{\mathsf{O}\,\mathsf{E}}\left(25^{\circ}\mathsf{C}\right)$$



Performance parameters definition

Sensitivity and linearity

To measure sensitivity and linearity, the primary current (DC) is cycled from 0 to $I_{\rm p}$, then to $-I_{\rm p}$ and back to 0 (equally spaced $I_{\rm p}/10$ steps). The sensitivity S is defined as the slope of the linear regression line for a cycle between $\pm I_{\rm p, N}$.

linear regression line for a cycle between $\pm I_{\rm P\,N}$. The linearity error $\varepsilon_{\rm L}$ is the maximum positive or negative difference between the measured points and the linear regression line, expressed in % of $I_{\rm P\,N}$.

Delay times

The delay time $t_{\rm D\,10}$ @ 10 % and the delay time $t_{\rm D\,90}$ @ 90 % with respect to the primary are shown in the next figure. Both slightly depend on the primary current ${\rm d}i/{\rm d}t$.

They are measured at nominal current.


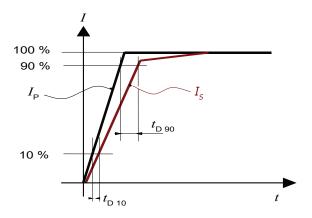


Figure 10: $t_{\rm D~10}$ (delay time @ 10 %) and $t_{\rm D~90}$ (delay time)



Dimensions (in mm)

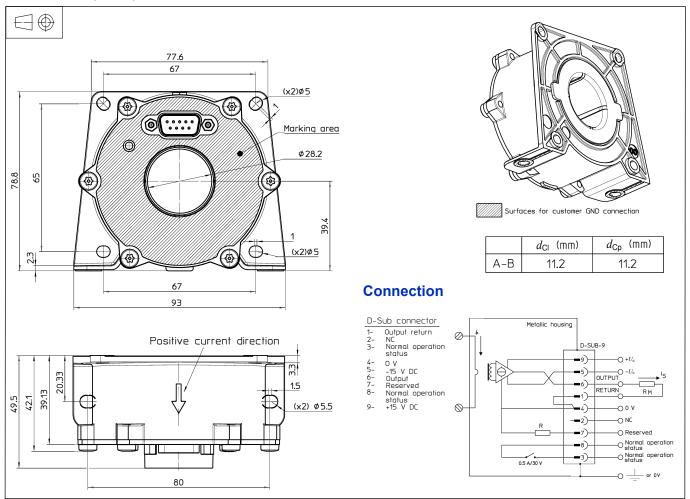

Connection

- Normal operation status (Pins 3 and 8)
 Normal operation means:
 - ± 15 V ($\pm U_{\rm C}$) present
 - 0 V on D-Sub has to be tied
 - zero detector is working
 - compensation current $\leq I_{PM}$
 - green LED indicator switches on.
- Direct current -- (DC)

Mechanical characteristics

General tolerance

±0.5 mm

Transducer fasteningVertical mounting

2 slotted holes

Ø 5.5 mm

2 M5 steel screws

Recommended fastening torque

3.7 N⋅m

- Horizontal mounting

4 slotted holes

 \emptyset 5 mm

4 M4 steel screws

Recommended fastening torque
Connection of secondary

3.2 N⋅m on D-Sub-9 UNC 4-40

Manual tightening until full stop

Remarks

- I_s is positive when I_p flows in the direction of arrow.
- We recommend that a shielded output cable and plug are used to ensure the maximum immunity against electrostatic fields.
- Temperature of the primary conductor should not exceed 100 °C.
- We recommend to fix the potential of the housing to the ground or 0 V (on indicated surfaces).
- Installation of the transducer must be done, unless otherwise specified on the datasheet, according to LEM Transducer Generic Mounting Rules. Please refer to LEM document N°ANE120504 available on our Web site: https://www.lem.com/en/file/3137/download
- All mounting recommendations are given for a standard mounting. Screws with flat and spring washers.

Page 11/12



IMPORTANT NOTICE

The information in this document is considered accurate and reliable. However, LEM International SA and any company directly or indirectly controlled by LEM Holding SA ("LEM") do not provide any guarantee or warranty, expressed or implied, regarding the accuracy or completeness of this information and are not liable for any consequences resulting from its use. LEM shall not be responsible for any indirect, incidental, punitive, special, or consequential damages (including, but not limited to, lost profits, lost savings, business interruption, costs related to the removal or replacement of products, or rework charges) regardless of whether such damages arise from tort (including negligence), warranty, breach of contract, or any other legal theory.

LEM reserves the right to update the information in this document, including specifications and product descriptions, at any time without prior notice. Information in this document replaces any previous versions of this document. No license to any intellectual property is granted by LEM through this document, either explicitly or implicitly. Any Information and product described herein is subject to export control regulations.

LEM products may possess either unidentified or documented vulnerabilities. It is the sole responsibility of the purchaser to design and operate their applications and products in a manner that mitigates the impact of these vulnerabilities. LEM disclaims any liability for such vulnerabilities. Customers must select products with security features that best comply with applicable rules, regulations, and standards for their intended use. The purchaser is responsible for making final design decisions regarding its products and for ensuring compliance with all legal, regulatory, and security-related requirements, irrespective of any information or support provided by LEM.

LEM products are not intended, authorized, or warranted for use in life support, life-critical, or safety-critical systems or equipment, nor in applications where failure or malfunction of an LEM product could result in personal injury, death, or significant property or environmental damage. LEM and its suppliers do not assume liability for the inclusion and/or use of LEM products in such equipment or applications; thus, this inclusion and/or use is at the purchaser's own and sole risk. Unless explicitly stated that a specific LEM product is automotive qualified, it should not be used in automotive applications. LEM does not accept liability for the inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

Applications that are described herein are for illustrative purposes only. LEM makes no representation or warranty that LEM products will be suitable for a particular purpose, a specified use or application. The purchaser is solely responsible for the design and operation of its applications and devices using LEM products, and LEM accepts no liability for any assistance with any application or purchaser product design. It is purchaser's sole responsibility to determine whether the LEM product is suitable and fit for the purchaser's applications and products planned, as well as for the planned application and use of purchaser's third-party customer(s).

Stressing and using LEM products at or above limiting values will cause permanent damage to the LEM product and potentially to any device embedding or operating with LEM product. Limiting values are stress ratings only and operation of the LEM product at or above conditions and limits given in this document is not warranted. Continuous or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the LEM product.

LEM products are sold subject to the general terms and conditions of commercial sale, as published at www.lem.com unless otherwise agreed in a specific written agreement. LEM hereby expressly rejects the purchaser's general terms and conditions for purchasing LEM products by purchaser. Any terms and conditions contained in any document issued by the purchaser either before or after issuance of any document by LEM containing or referring to the general terms and conditions of sale are explicitly rejected and disregarded by LEM, and the document issued by the purchaser is wholly inapplicable to any sale or licensing made by LEM and is not binding in any way on LEM.

© 2025 LEM INTERNATIONAL SA – All rights reserved